


## Assembly manual ZWO EAF focus motor for TS Telescopes

First, remove the locking screw (left red mark) and the hex screw (right red mark).

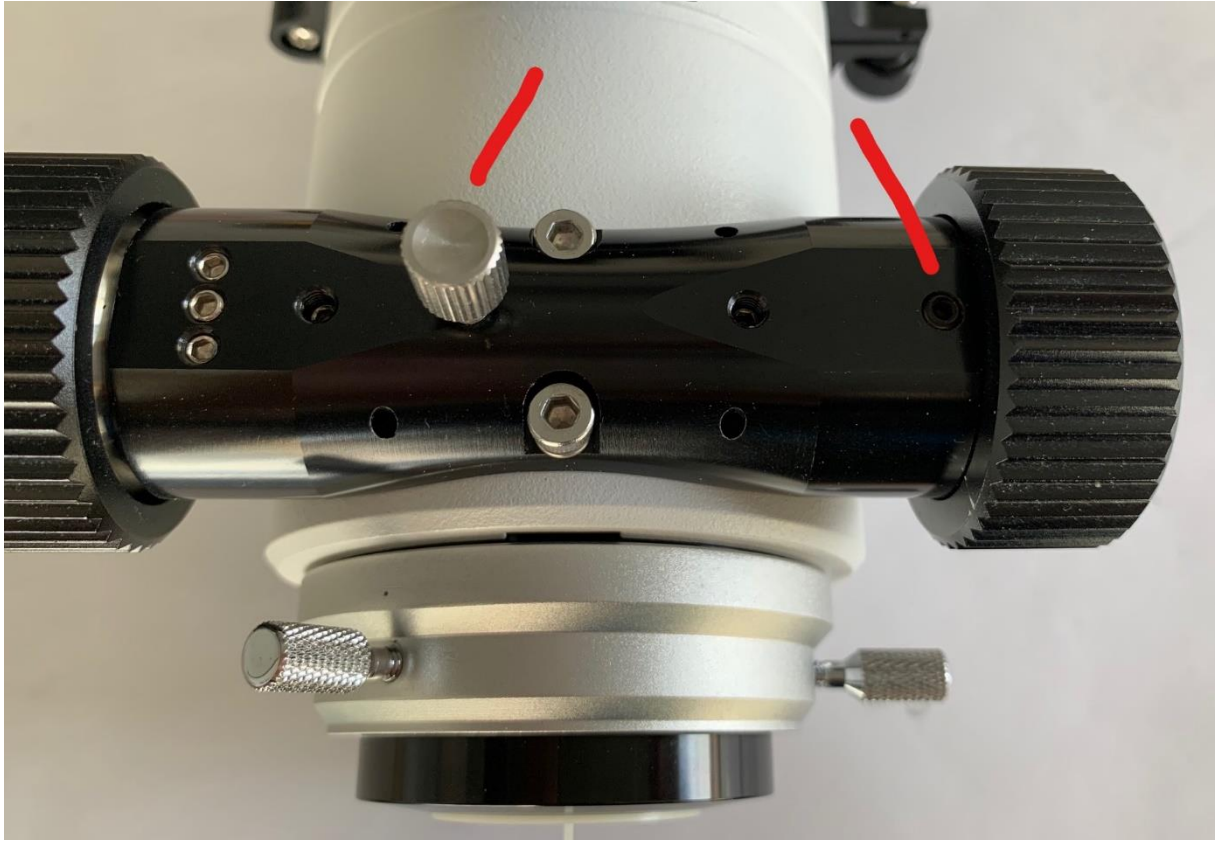

Then, turn the focus wheel until its hex screw appears in the thread bore of the removed setting screw. Loosen it. In some cases, there is a second setting screw in a 90° position. Loosen it, too. Now you can pull off the focus wheel.



Take the correct coupling for the shaft diameter out of the EAF box and tighten both screws through the bore (tighten first one, turn the shaft by 90° and tighten the other one).



Now, fix the holding bracket loosely to the focus motor and align it to the focus mechanism with the motor shaft inside the coupling. Use the original locking screw to fix the bracket and tighten the bracket screws (right red marks) if everything is in place. Tighten also the setting screws at the motor side of the coupling.