


## Opening the filter wheel for filter change and cleaning

This is quite simple: There are nine small Phillips screws on the edge of the telescope side, these are loosened with the enclosed screwdriver. See also this illustration:

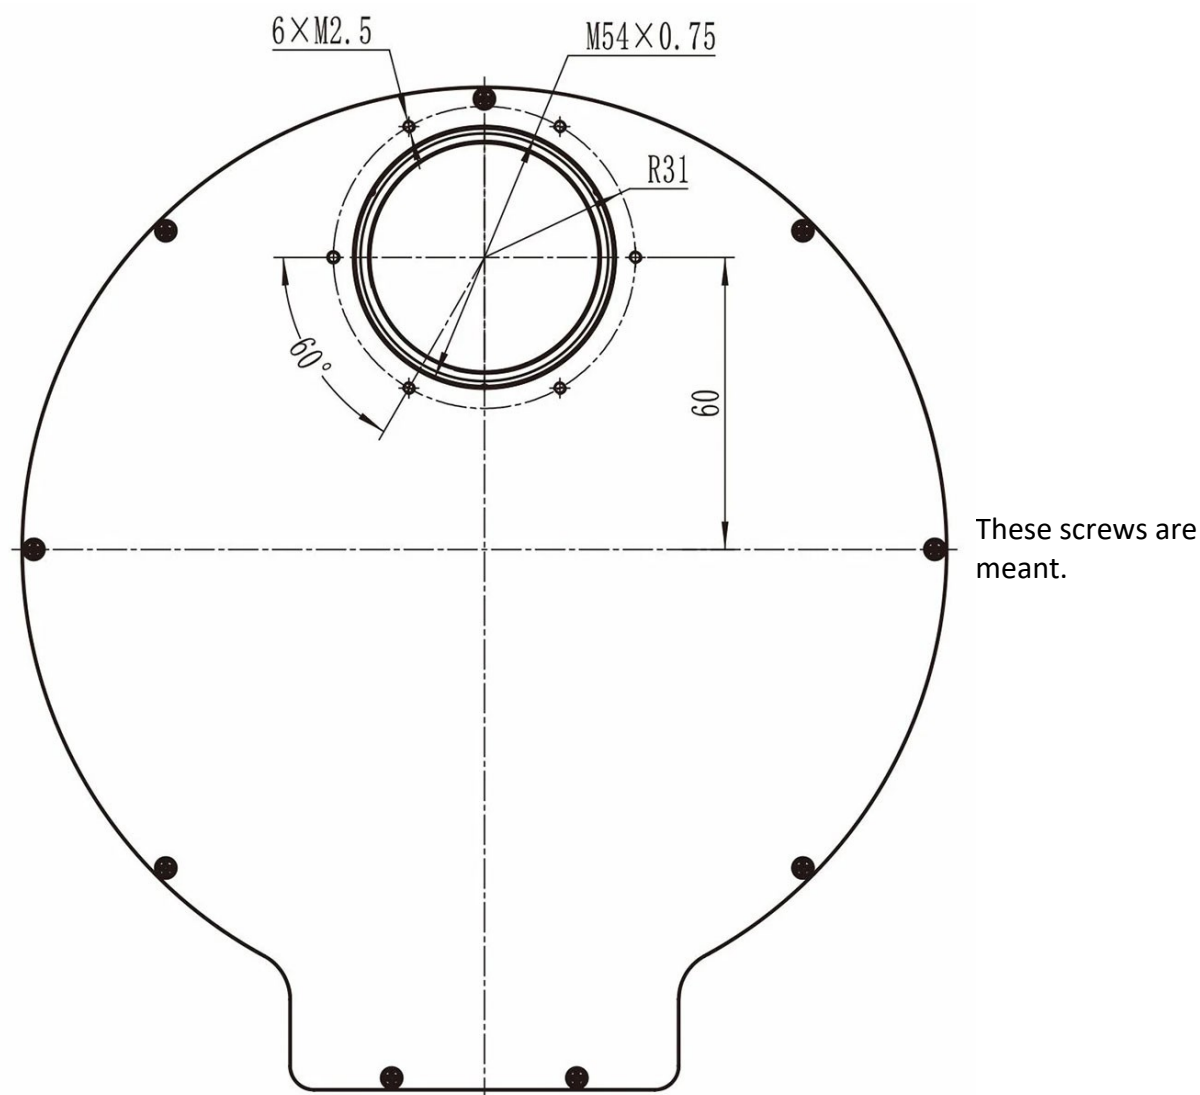

The cover plate can now be removed and the filters are accessible. The camera can stay mounted.

If you want to remove the filters themselves, loosen the three Phillips screws around the retaining frames of the individual filters on the 7x36 mm filter wheel. They then lie freely in the corresponding recesses in the filter wheel. The mounted 1.25" or 2" filters, on the other hand, can simply be unscrewed from the carousel.

Reassemble in reverse order. Please note that the screws of the filter holding frames must only be tightened very lightly.